

 


# READER TERMINAL


## MASTER CARD - USER MANUAL



^ Opening single locker

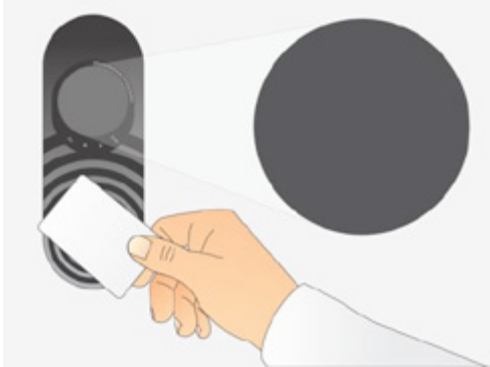

**STEP 1:** Approach the Master Card to the antenna field. Reading distance is 3-5 centimetres from the device surface. Hold the Master Card in the field for a few moments.

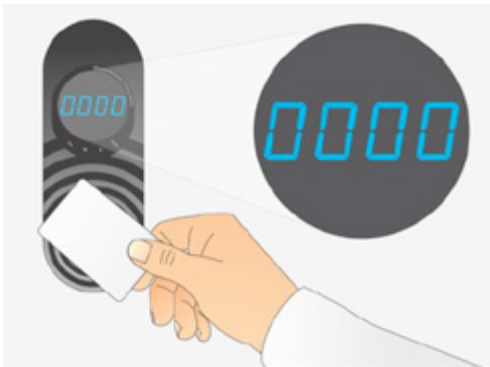

**STEP 2:** When the card is recognised as a Master Card, the 4-Key Keyboard is activated and "0000" displayed. The first digit to be edited is flashing.

Remove the Master Card from the antenna field.

## READER TERMINAL MASTER CARD - USER MANUAL



**STEP 3:** Select (or Enter) the desired locker number by pressing the 'up' key to increase or the 'down' key to decrease the currently flashing digit. Use the 'enter' key to move to another digit. When you get to the last digit, pressing the 'Enter' key will return the focus to the first digit.


**NOTE:** "ESC" key will abort the master card mode of operation.



**STEP 4:** When the desired locker number to be opened is displayed, present the Master Card again to the antenna field to confirm unlocking.

When the Master Card is recognised, a short beep acoustic signal is activated and corresponding locker is opened.

### ^ Emergency opening all lockers

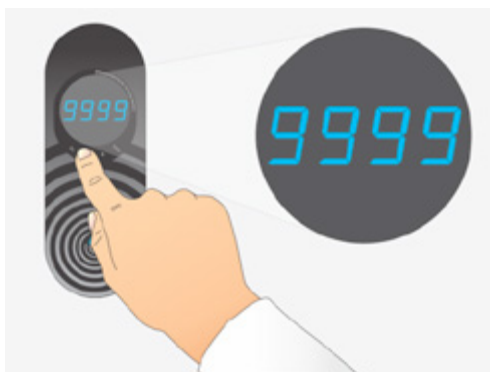


Steps 1 and 2 are the same as when unlocking a single locker.

**STEP 3:** Enter the number '9999' and leave the rightmost digit 9 flashing.



**STEP 4:** Press the 'up' key and the display will show "ALL".

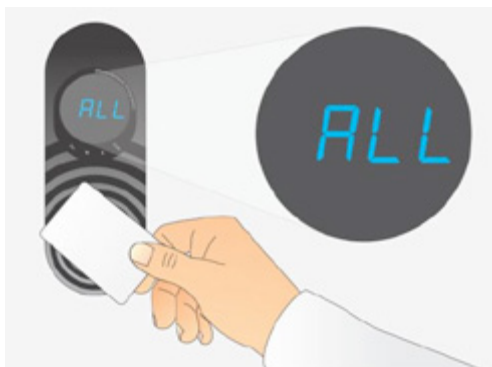


**STEP 5:** Present the Master Card again whilst “ALL” is displayed. This will initiate an emergency procedure. All lockers will now start to open sequentially.

### ^ Opening series of up to 50 lockers



Steps 1 and 2 are the same as when unlocking single locker.


**STEP 3:** Select (or Enter) the desired locker number as described for single locker above.

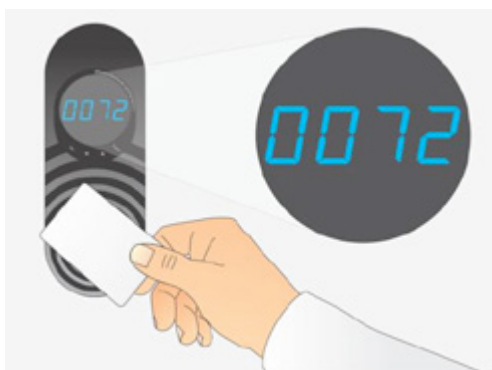

**STEP 4:** Present AND HOLD the Master Card in the antenna field to confirm the composed starting number.

When the Master Card is recognised, a short beep acoustic signal is activated and the corresponding locker is unlocked.

**Hold** the Master Card in the antenna field to continue procedure!

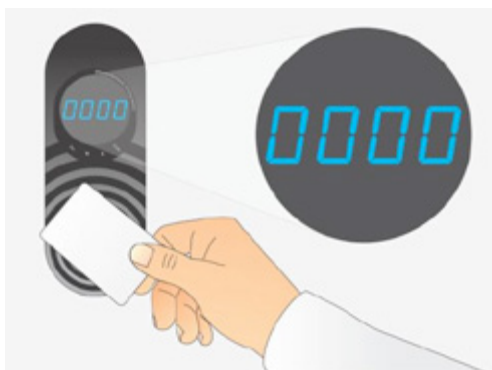


**STEP 5:** DO NOT remove the Master Card from the antenna field until all 4 zeros are displayed again. The 4-Key keypad is now activated to enter the last Locker number to be opened.

Remove the Master Card from the antenna field.



**STEP 6:** Select (or Enter) the desired end (last to be opened in the row) locker number.

**NOTE:** Difference between start and end locker number must not be higher than 50.

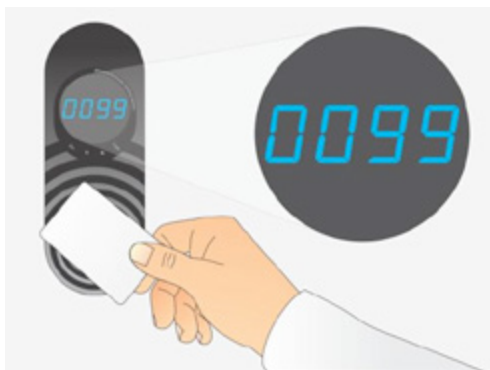

**STEP 7:** Present the Master Card again to confirm the composed end number.

When the Master Card is recognised, a short beep acoustic signal is activated and the corresponding lockers will start to unlock.

Display shows the locker numbers that are currently unlocked until the procedure ends.

## ^ Master mode termination

Master Mode of operation is terminated:

- ^ After successful operation.
- ^ After 1 minute of non-activity.
- ^ If "ESC" is pressed on the keypad.